## **AUTOMATIC HAIR DRYER ZEFIR (M32052TC)**

# Thank you for purchasing our product. We are sure that it will meet your expectations and maintain a high level of hygiene.

Electric hand dryer in a housing made of durable and damage resistant materials. The device is equipped with an infrared sensor and a double safety system to prevent overheating.

#### **Technical specifications:**

Rated power: 700 W
Launch: automatic
Air speed: 10 m/s
Hose length: 50 – 150 cm
Voltage: 230 V

Dimensions (H x W x D): 265 x 92 x 105 mm

Housing: ABS
Net Weight: 1,2 kg
Certificate: CE
Waterproof: IPX4

Warranty: 24 months "door-to-door"

50 Hz

#### **Mounting:**

Frequency:

#### Installation of the dryer can perform only person with the current electrical authorization.

- 1. Select the installation place (due to regulations), taking into account the cable length and the distance to electrical outlet.
- 2. Pull the fastening element made of plastic from the dryer housing by strong pull to release the latches.
- 3. Applying the fastener to the wall, you should set drilling holes for tent pegs.
- 4. Drill three holes by drill in 6 mm diameter, in the drilled holes put attached plugs.
- 5. Tight the fastener to the wall with screws, which are included in the kit.
- 6. Slip the hair dryer onto the fastener. Check, by pulling the hair dryer up, whether securing clips blocked the dryer on fastener. Connect plug into the socket.

### Cleaning:

Clean the cover with a soft, damp cloth with a mild, neutral detergents. Do not use abrasive cleaning fluids.

#### **General notes:**

- Installation of the hair dryer should be made in a way that prevents people using the shower or taking a bath to reach the dryer.
- Do not install the dryer over washbasins. Do not install it above horizontal surfaces within a distance less than 40 cm. Do not install in direct sunlight and over mirror surfaces.
- Install the unit on a solid wall, not exposed to shakes.
- In rooms equipped with baths or shower trays the hand dryer should be installed outside the second zone due to requirements of the standard PN-HD 60364-7-701.
- Do not install in areas with excessive dust, where flammable gases may exist.
- Do not let water or other liquids to get into the dryer.
- For safety purposes, installation and maintenance should be carried out by a person having current electrical authorization.
- Do not block the air inlet and outlet.

