



HIGH SPEED SERIES

ENTRY LEVEL HIGHSPEED HAND DRYER

Operation Instruction

CATALOGUE

Product Features	1
Technical Specifications	1
Packing List	1
Name Of Componets	2
Notice Items Before Installation	2-3
Installation	3
Operation	4
General Safety Information	4
Warranty	5

Thank you for choosing our Entry Level Hand Dryer Hand Dryer.
Please read carefully before attempting to install, operate or service the product.
Protect yourself and others by observing all safety information.
Retain instructions for future reference.

GENERAL MAINTENANCE

1. Surfaces of the unit should be cleaned with a soft cloth dampened with neutral cleaning agent. Do not use caustic solutions or abrasive cleaning materials on the drier.
2. Prevent the water from flowing or spilling into the interiors of machine.
3. Always use genuine spare parts when old parts need to be replaced.
4. Disconnect the power source and contact with qualified maintenance personnel for service when machine error happened
5. Must be pulled out the power supply and placed in the shade and dry place if don't use the device in a long time

 
WARRANTY

1. Entry Level Highspeed Hand Dryer are guaranteed to be free from defects in parts and manufacture for 1 years from the date of purchase
2. The warranty is only available to the original purchaser and is not transferable.
3. If there are any defects with your hand dryer please contact the provider stating your invoice number, date of purchase, full name and address.
4. Do not attempt to repair or take apart the hand dryer yourself. If the hand dryer has been tampered with before it arrives with us, the warranty will be void.
5. The warranty will be void if user can not provided that the product is used under the normal operating conditions stated within the manual;
6. If your hand dryer occurs a problem outside of the warranty period, we offer a pay-for-service where we can collect and professionally repair your hand dryer.


OPERATION

when using the Entry Level hand dryer please shake off any excess water before placing hands under air outlet, the dryer will start automatically when hands are placed under air outlet and stop automatically after hands have been removed.


- 1** Place hands under the outlet to start operation

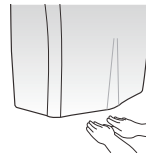

 - 2** Slowly move hands back and forth through the air jet for a while.

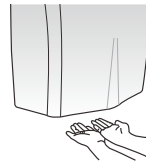

- 3** Rub hands lightly and rapidly.

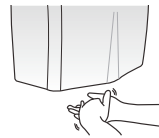 

GENERAL SAFETY INFORMATION

Warning

1. Do not touch power source with wet hands.
2. Do not place foreign objects in the unit or use flammables cover the unit.
3. Young children or persons with physical, sensory or mental disabilities should be supervised when using the appliance.
4. If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a qualified person in order to avoid a hazard.

PRODUCT FEATURES

1. The affordable entry model is particularly quiet in operation, whilst still maintaining a highly concentrated air stream, making it suitable for areas where loud noise would be disruptive.
2. The rotate speed of motor can reach 20000r/min, efficiently drying your hands within a short time
3. Contactless, hygienic operation which automatic starts when hand detected.
4. It will stop working automatically after 60s continuous operation which can avoid extra continuous misoperation caused by people on purpose or machine itself.
5. Flexible installation ensure maximum protection against vandalism and theft.


TECHNICAL SPECIFICATIONS

Rated Voltage: 220-240V	Rated Frequency: 50/60Hz
Rated Power : 1500W	Motor Power: 150W
Heating Element Power: 1350W	Sensor Distance: 5-20cm
Environment Temperature: -5-50	Installation: Wall-mounted
Water Splash Proof: IPX4	Unit Size: 194*132*263mm

Packing List :

Main unit x 1	Install Screw x 4
Wall Mounting Bracket x 1	Expansion Pipe x 4

 NAME OF COMPONENTS

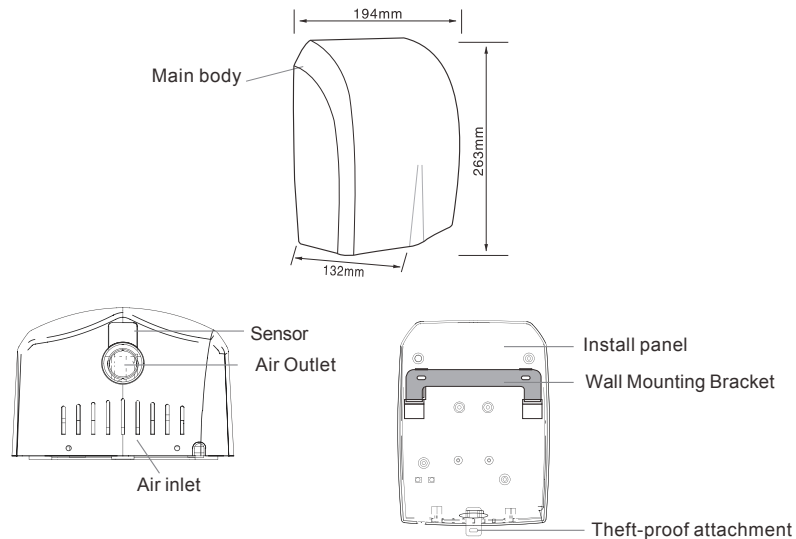

Notice Items Before Installation

Please protect yourself and others by observing all safety information



 
Warning Failure to accurately follow the instructions before installing or servicing may result in fire, electric shock or personal injury.



Caution Improper mounting could result in personal injury and/or property damage.



- Do not use in locations where salt water damage may occur or where corrosives are present.
- Do not use in areas with high humidity and dustiness as well as avoid condensation on the product.
- Always disconnect the power source before servicing or installing the hand dryer
- Installation work must be done by qualified personnel in accordance with operation instructions
- Do not attempt to repair or take apart the hand dryer yourself




- Install securely in a location strong enough to support the weight of the unit.
- Install the hand dryer on a smooth surface and in an area where people are not likely to collide with the object once installed.
- Do not install this hand dryer above sources of water such as sinks or taps.
- Ensure a clear space of at least 400mm around the air nozzle.
- This unit has been designed for indoor use only, protected from water, sun and extreme temperatures. Do not use outdoors or close to moisture and heat generators.

INSTALLATION


Select a desired height mounting location for the hand dryer (see mounting height recommendations)

Option 1: Using 4 screws and 4 expansion pipes to fixate the wall base plate

 Option 2: Using 2 screws and 2 expansion pipes to fasten the mounting bracket attach the dryer then fasten the theft-proof attachment.

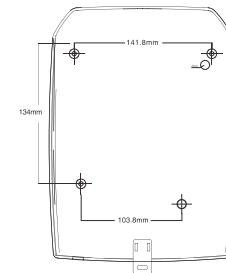

Option 1

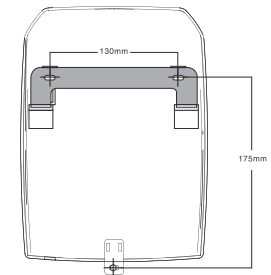 

Option 2

Recommended mounting heights

Men	50" (1270 mm)
Women	47" (1194 mm)
Children 11-16 years	41" (1040 mm)
Children 4-10 years	35" (890 mm)
Handicaped	40" (1016 mm)

